


# Lamp exchange

- Focus reflector into Spot-Position (See picture) by turning the focus knob.

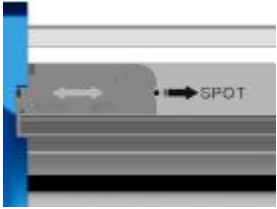

- CAUTION - Hot Lamp. Allow the lamp to cool down sufficiently before replacing.
- Press the door lock to release the safety glass and turn them carefully open.
- Press the Side cover release knob on the rear casting to open the side cover and to get the access to the lamp lock lever (21 see picture 4).
- By turning the lamp lock lever counterclockwise to rear position (see picture 4) the lamp contacts as well as the lamp support will be released and the lamp can be taken out of the luminaire.
- We suggest removing the lamp before transport. Make sure that the lamp lock cover is subsequently closed.
- Use gloves while inserting the lamp

# Inserting the lamp

- Carefully insert the lamp through the reflector into the lampholder. A lamp indicator (22; picture 3) will show the correct fitting of the lamp in the lamp holder. Also make sure the lamp is centered in the middle of the reflector.
- Fix the lamp by turning the lamp lock lever (21 see picture 4) clockwise into the lock position.
- Close the side cover by pushing the side cover release knob.
- Afterwards close the safety glass (10) and fix it with the door lock (15). A clicking noise must be heard.
- Attention! The power of the connected ballast must confirm with the lamp power.
- Make sure, the green LED (16) (auxiliary power) is on. This shows the normal use of the needed fans inside the luminaire.

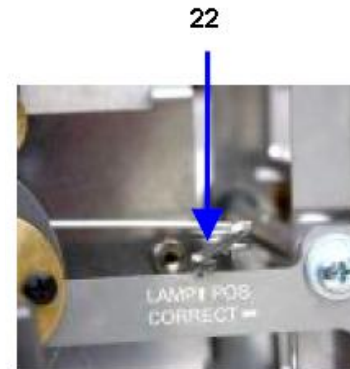


Bild 3 / Picture 3

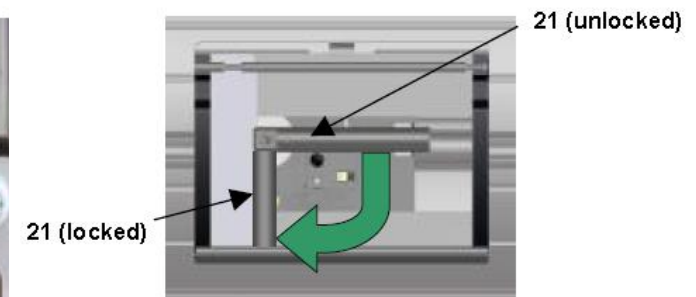


Bild 4 / picture 4